
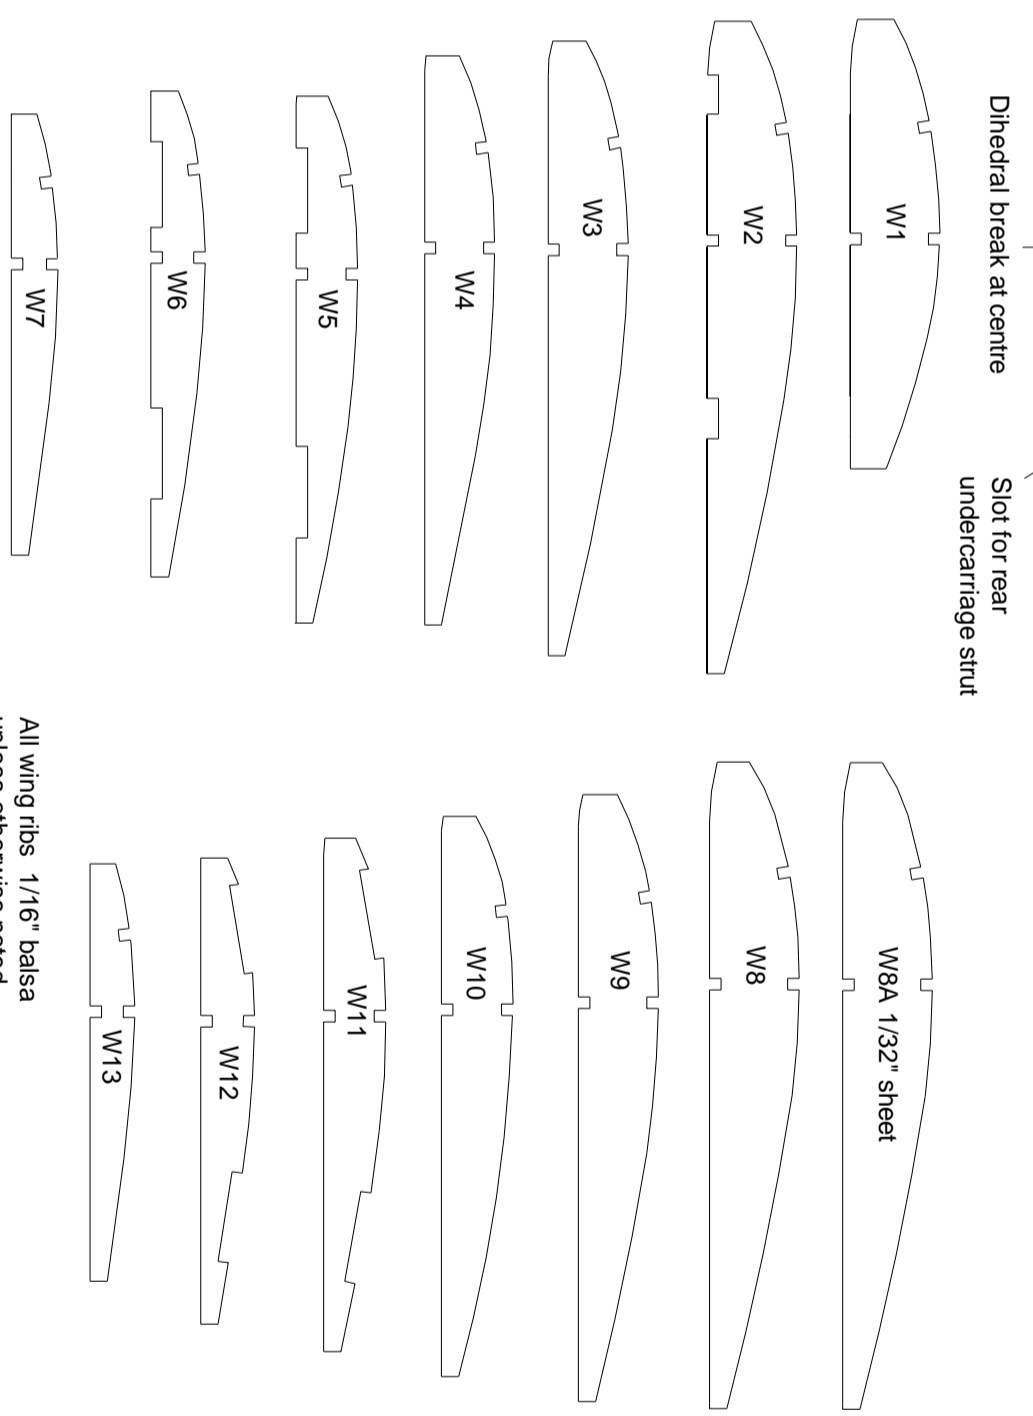


Build tailplane flat on board using 1/16" x 1/8" for spars and ribs. Then remove from board and add 1/16" square to bottom of ribs and spars. Finally sand to streamlined section.

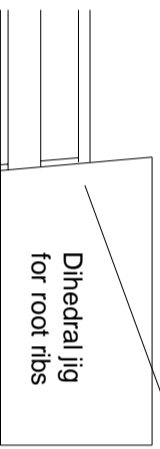

All wing ribs 1/16" balsa unless otherwise noted

1/20th scale Vought SBU -1  
 free flight scale model for rubber power designed and drawn by Mike Stuart  
 Sheet 2 of 3